SCOSCHE® VO3135B

IN-DASH INSTALLATION KIT FOR 1973-93 VOLVO 200/240 SERIES

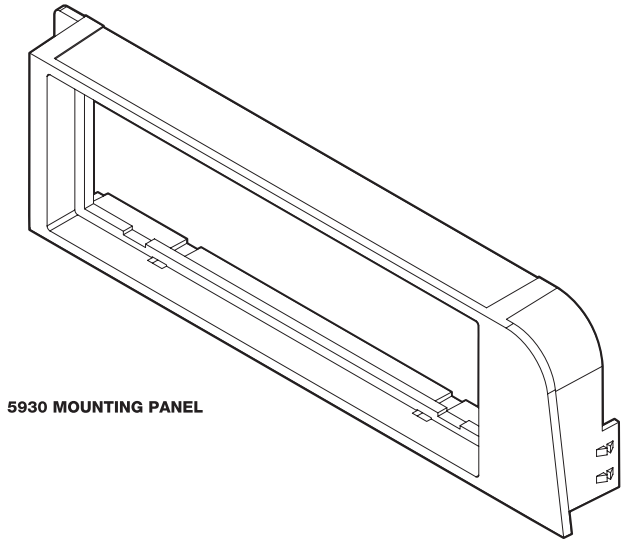

INTRODUCTION/PRELIMINARY

This premium installation kit is for 1973-93 Volvo 200/240 Series vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VO01	**VWAB**
1989-UP VOLVO	VW/European antenna adapter

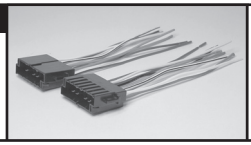

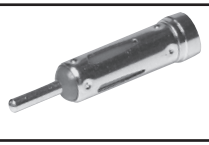

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2007 SCOSCHE INDUSTRIES, INC.

DASH DISASSEMBLY

STEREO REMOVAL

1. Unsnap square trim, left of storage box.
2. Extract (2) Phillips screws securing storage box on left side.
3. Unsnap trim ring from A/C air vents, pulling on storage box at the same time. Remove trim ring only.
4. Using small screwdriver, slide end carefully behind right side, slide bottom of storage box and push storage pocket left. Remove storage box.
5. Remove (7) Phillips screws securing glove box. Disconnect and remove.

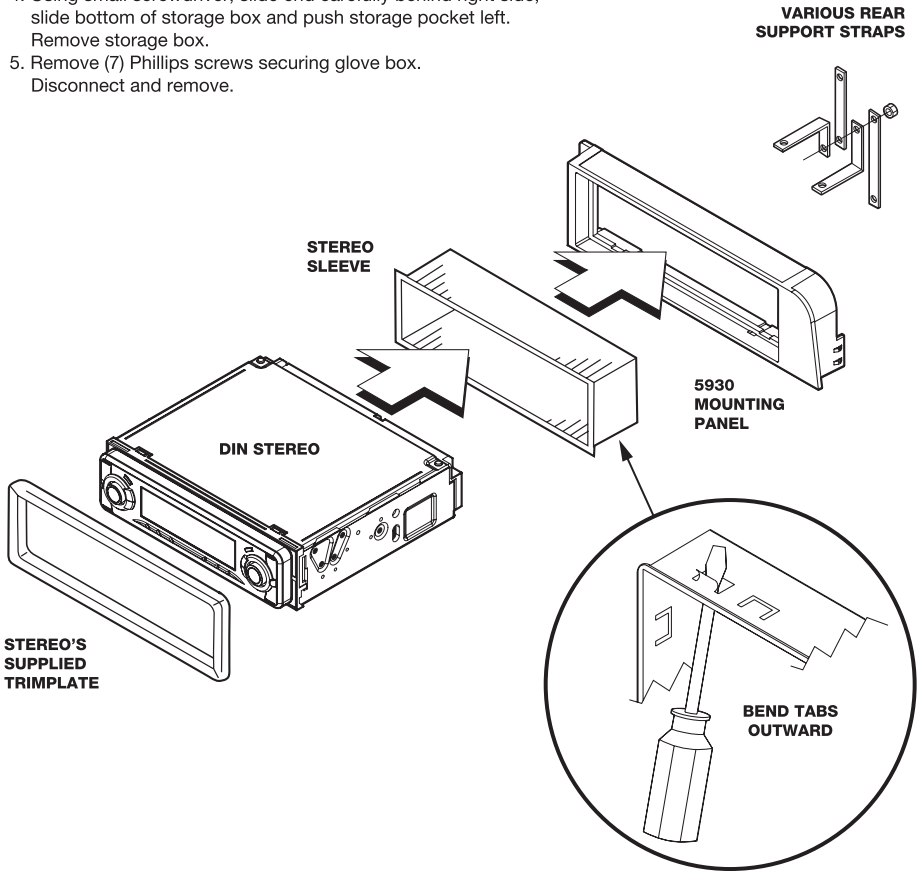

NOTE: REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this VO3135B kit for 1973-93 Volvo 200/240 Series vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.